



IJCAD Mechanical

Setup Manual

Ver.2

目次

1. Before Installation

- 1-1. Operating Environment ----- 2
- 1-2. Prepare for the installation ----- 2
- 1-3. Transition method from Trial version to Product version ----- 3

2. New Installation of Program

- 2-1. Download from WEB ----- 4
- 2-2. Load from DVD ----- 6
- 2-3. Installation ----- 7

3. License Registration

- 3-1. Standalone version (On-line) ----- 10
- 3-2. Standalone version (Email Application) ----- 12
- 3-3. USB version ----- 16
- 3-4. Network License version ----- 17

4. Return / Transfer the License

- 4-1. Standalone version (On-line) ----- 18
- 4-2. Standalone version (Email Application) ----- 20

5. Update Installation

- 5-1. Before Update Installation ----- 24
- 5-2. User Registration ----- 24
- 5-3. Update Installation procedure ----- 25

6. Uninstall the program

- 6-1. Before Uninstallation ----- 26
- 6-2. Uninstallation Procedure ----- 27

7. Subscription License

- 7-1. Program Installation ----- 28
- 7-2. License Registration ----- 31
- 7-3. Return License ----- 31

8. Installation for Version Up / Class Up

- 8-1. Standalone version ----- 32
- 8-2. USB Version ----- 33

1. Before Installation

Be sure to check the following contents before installing product software.

1-1. Operating Environment

The following operating environment is necessary for this product.

• C P U	More than Core i5 (recommended)
• R A M	More than 4GB (recommended)
• H D D	More than 550MB
• OPTION	DVD-ROM Drive (In case to install from DVD)
• PC/OS	Windows 7 (32bit, 64bit) Windows 8、8.1 (32bit, 64bit) Windows 10 Version 1709 (32bit, 64bit) Higher version than .NET Framework 4.0 necessary to be installed

- ※ When installing 32 bit version on 64 bit OS, then it will work as 32 bit application.
- ※ **You can not use IJCAD of 32 bit version and 64 bit version together on the same PC.**
When IJCAD Mechanical of different bit number version will be installed on the machine which is already installed the other bit number version before, IJCAD Mechanical of the previously installed bit number version becomes unable to use.
- ※ If ".NET Framework 4.0" or higher version is not installed on your computer, Please download "Microsoft .NET Framework 4.0" from IJCAD environment setting module download page.
(https://www.ijcad.jp/download/DL_ijcad_tools.html)

1-2. Prepare for the installation

- Please prepare PDF file with the license information sent by email (file name "*license information _ ○○ 様 .pdf*").
- **"Administrator's authority" is required to install.**
- Always close all the other applications before installing. If you install while running the other applications, installation may not be performed normally.
- ※ **For the customers who have IJCAD Mechanical 2014 License Please refrain from installing IJCAD Mechanical 2014 on the machines with IJCAD Mechanical 2015 or later installed.**
The old version data is overwritten and IJCAD Mechanical will not launch properly.

1-3. Transition method from Trial version to Product version

If you have already installed the Trial version and you are using it, use the following method to transit to the product version.

● Standalone Version

It is possible to change the serial key from the Trial version to the Product version. You may transit to the product version without uninstalling the Trial version.

※ Depend on the situation, the Product version may be newer than the installed Trial version. Generally, it is recommended to uninstall the Trial version, and then to install the Product version.

- **Change serial key to transit to Product version**

⇒ Refer to "[3. License Registration](#)"

※ After product activation is completed the product version will be switched on.

- **Install product version after uninstalling trial version**

⇒ Execute "[6. Uninstallation of program](#)", and then go to "[2. New Installation of program](#)".

● Network version / USB version

It is not possible to change the serial key from Trial version to Product version. Once you uninstall the Trial version, then install the new Product version.

- **Install product version after uninstalling trial version**

⇒ Execute "[6. Uninstallation of program](#)", and then go to "[2. New Installation of program](#)".

2. New Installation of Program

The program can be downloaded from the IJCAD site.
If you can not connect to the Internet or want to obtain the program beside download method, please use the optional installation DVD.

The installation procedure is different between from the web site and from the DVD.

Please refer to the following item.

- **Installation from the WEB site** ["2-1. Download from WEB"](#)
- **Installation from the DVD** ["2-2. Load from DVD"](#)

2-1. Download from WEB

Download the installation file from WEB site.

① Access to WEB site


Please access the download page, from the indicated URL described in the guidance email sent from us.

② Download the ZIP file

Please access the download page, from the indicated URL described in the guidance email sent from us.


③ Decompress File (Unzip)

The downloaded file is a compressed file.
Please be sure to decompress it.

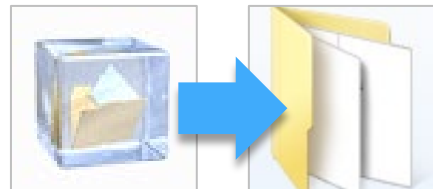

④ Execute [setup.exe]

Open the folder after decompressing.
Click [setup.exe] in the folder and Right click the mouse to run as administrator.

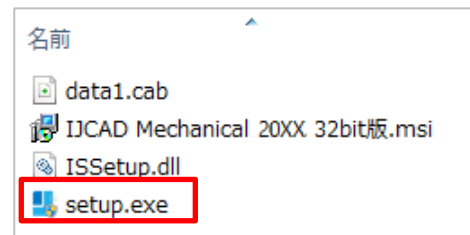


Then Installer will launch.
Proceed to "[2-3. Installation](#)".

2-2. Load from DVD

Open the installer from the DVD setup dialog.

① Load DVD

Insert the installation DVD in the disk drive of the PC.
The following dialog will be displayed depending on the PC environment.
Please click [LoadMenu.exe].

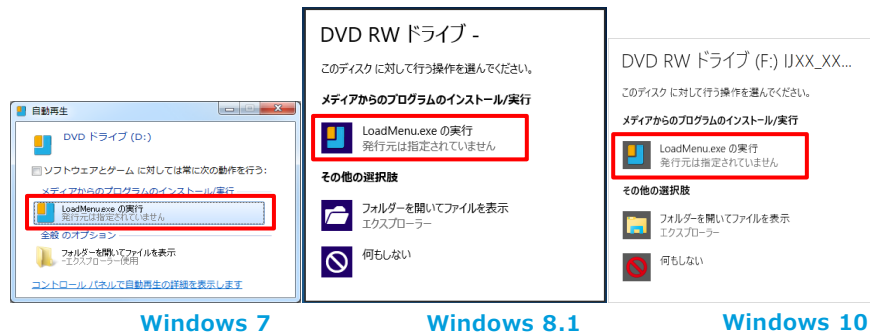

② Open the IJCAD Mechanical Setup

Click the icon of [*IJCAD Mechanical Setup*].



③ Launch the installer

Click the setup icon of the applicable grade and bit number.



The installer will launch. Proceed to "[2-3. Installation](#)".


2-3. Installation

Install the product from the installer.

① Launch the installer


Refer to “[2-1. Download from the WEB](#)” and “[2-2. Load from DVD](#)” then launch it.

Click [**Next**] button.

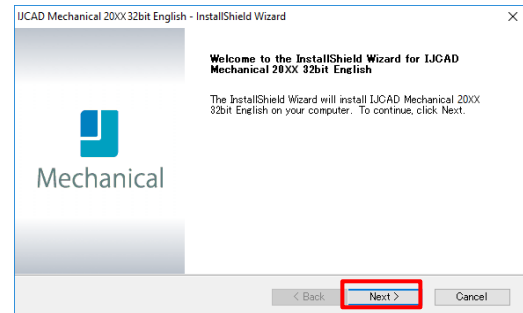

② License Agreement


Confirm IJCAD software license agreement. If you can agree with it, check the check box "**I agree with all the terms of the license agreement**". Please click [**Next**] button.

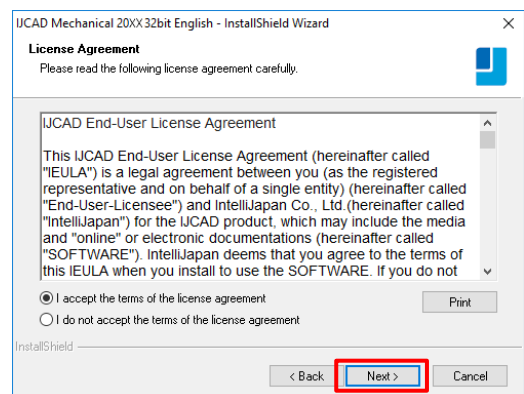

③ Input User Information

Key in User name, company name, serial key and click [**Next**] button.


About the serial key, refer to the information sent by email PDF file in the license information.

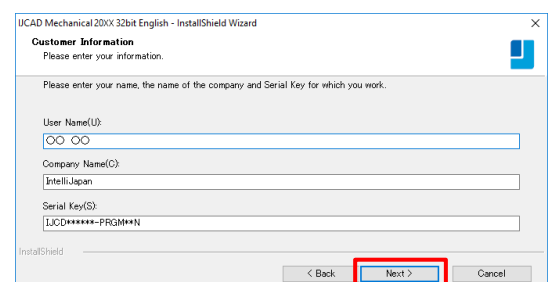

④ Select the installation destination

If you want to select the installation destination folder, click [**Browse**] button to define.


If it is not necessary to specify, click [Next**] button to proceed.**

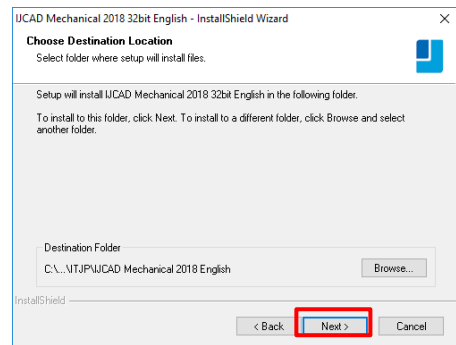

⑤ Select the program folder

If you want to select the program folder, click [**Browse**] button to define.


If it is not necessary to specify, click [Next**] button to proceed.**

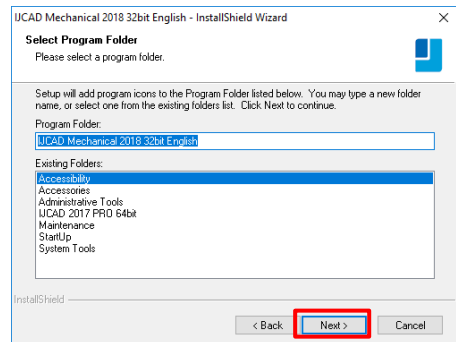

⑥ Installation

Installation will start soon. Please wait. When the completion message is displayed Click [**Finish**] button.

The icon of IJCAD will be displayed on desktop or start menu.

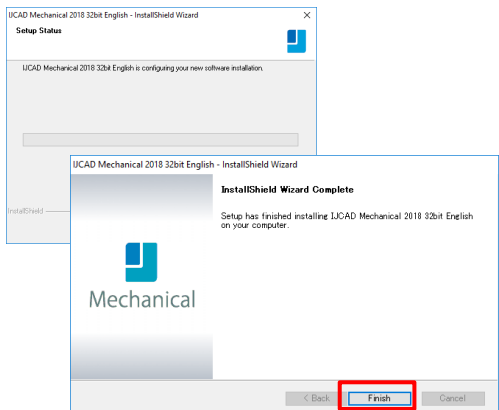

⑦ Launch

※ Be sure to Launch IJCAD as administrator when running for the first time.

Right-click the mouse on the IJCAD desktop icon, and select [Run as Administrator] from the displayed menu, and start the program.

3. License Registration

After installing IJCAD, if the license is not authenticated, the program will start as a Trial version.

You can use all functions as a trial version for 30 days same as a license authenticated status. But when the trial version expires, you will not be able to save the drawing any more.

It is recommended to authenticate your license as soon as possible.

How to register your license depends on the type of license you use. Please refer to the following items.

Standalone version

You can get license certification of this product by On-line activation.

Refer to "[3-1. Standalone version \(On-line\)](#)".

If you can not connect to the Internet,

Refer to "[3-2. Standalone version \(Email Application\)](#)".

USB version

You can authenticate the license by inserting the USB key.


Refer to "[3-3. USB version](#)" for more details.

Network License version

IJCAD 2018 does not support Network license manager before Ver 4.0 (published on 2017/2/1).

If you use IJCAD 2018, please use the latest network license manager.

You can confirm the network license manager's version by the following method.

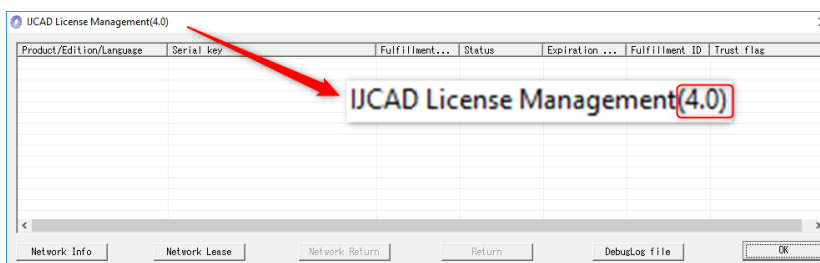

Please confirm your current version by displayed number.

Please refer to the setup manual of the network license manager in order to know the license registration method on the server side.

Refer to "[3-4. Network version](#)" for authentication on the client side.

3-1. Standalone version (On-line)

Register your license online.

Be sure to operate in an environment where you can connect to Internet.

① Launch Dialog

Start IJCAD.

Then [**IJCAD License Registration**]

Dialog will open.

Click the [**Standalone**] and [**OK**] button.

② Input User Information

Please be sure to enter an official company name and user name.

User information and serial key registered during the installation are set as default values.

If it differs from the information to be registered, change it to a new value.

In case of transition from trial version, the serial key column of this dialog shall be blank.

Refer to the license information and enter the serial key.


After filling the information, click [**Authentication by Online**] button.

③ Authentication completed

Confirm the [Notes], check the checkbox, and click [OK].

The program may start as a trial version immediately after authentication.

In this case, once close IJCAD and restart it, then you will become able to use it with your license authenticated.

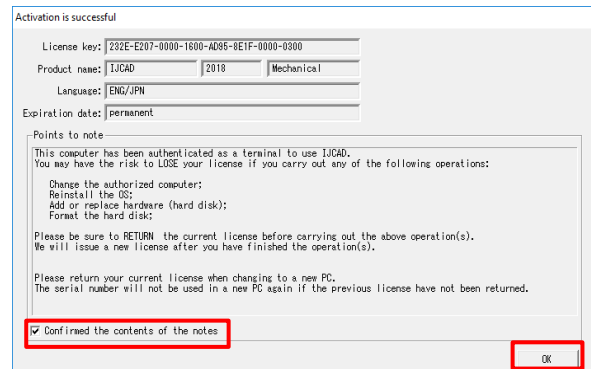

3-2. Standalone version (Email Application)

If you cannot perform activation by online, you can apply by email, and Intelli Japan will issue the file for activation.

It takes 2 ~ 3 business days to issue for email application depending on the situation. Please note the deadline of trial version. (If the trial version expires you will be unable to save the drawing.)

① Launch Dialog

Start IJCAD.

Then [**IJCAD License Registration**]
Dialog will open.

Select [**Standalone**] button and click
[**OK**] button.

② Input User Information

Please be sure to enter an official company name and user name.

User information and serial key registered during the installation are set as default values.

If it differs from the information to be registered, change it to a new value.


 
In case of transition from trial version, the serial key column of this dialog shall be blank.

Refer to the license information and enter the serial key.

③ Create License File Information

Click [**Create license information file**].

The file name "<license key>.xml" will be automatically created in [**Public documents**] [**IJCAD 2018**] » [**Register**] folder.

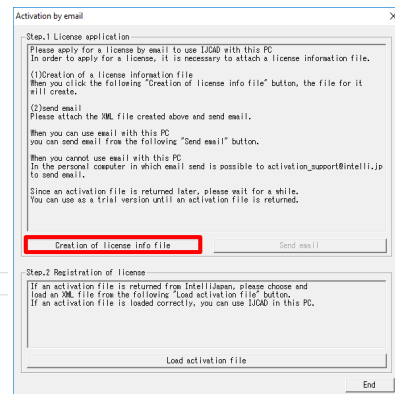


④ Email Application

If you can send and receive email to perform authentication, select [**Send Email**] button. The email screen will open, with necessary information filled in.

※ The email program which is configured to [mailto] function in your PC will launch.

At this time, the license information file is not attached to the mail.

Please attach the license information file created in step ③ and send the mail.

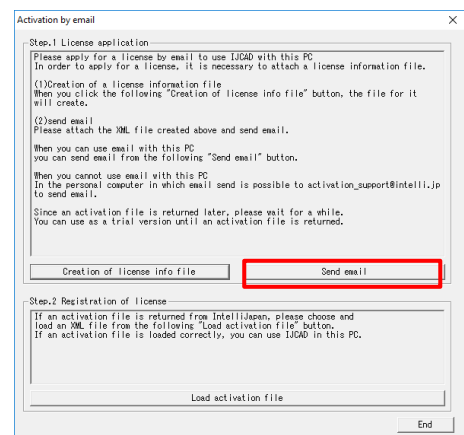

If you can not send an email, move your license information files by USB memory to the computer that can send and receive email to apply. (It is also possible to apply multiple licenses together.)

- | | |
|---------------------------|------------------------|
| • Company Name | • Computer Name |
| • Person in Charge | • Serial Key |
| • Telephone Number | • License Key |

Please complete the above license information in the email, attach the license information file, and send it to activation_support@intelli.jp.

Please wait for the reply from Intelli Japan after applying.

⑤ Receive Activation File

In a few days, the Activation file will be delivered from Intelli Japan.

Attached file :

0000-0000-0000-0000-0000-0000-0000-0000-resp-act.xml

<http://ijcad.zendesk.com/attachments/token/xxxxxxxxxx/?name=0000-0000-0>

Intelli Japan send the activation file from the system automatically, and sometimes the activation information won't reach as an attached file, then it will be included as a link in the email text.

(It may be recognized as an attached file depending on the email software type.)

To receive as HTML format

Please click the file name link at the bottom of the email you received (The part under the signature of Intelli Japan), then you can download the attached file.

The file name is

"<license key> -resp-act.xml".

※ The bottom line link is from customers' files, named "<license key> .xml" which is sent to Intelli Japan by the customer. Please note that this is not an activation file.



To receive as TEXT format

Link of the URL is listed under the file name as follows.

You can download it by accessing the link in the right click menu.

You may copy & paste this URL to the browser to access it.

(The position of the link URL is the same as the former HTML format case)

 
※If you can not access the link or if you can not download the file, please contact to activation_support@intelli.jp.

We recommend saving the activation file,

[Public documents] » [IJCAD 2018]

» [Register]

where the license information file is saved.



3-3. USB version

Since the USB version authenticates the license by reading the USB key, you do not need to activate it. The license will be verified in the following way.

※ The USB key is for authenticating the license. IJCAD program needs to be installed separately. For details, refer to "[2. New Installation of program](#)"

① Insert the USB key

Insert the USB key of this product into the USB drive of your PC.

※ When the USB is loaded correctly, the part behind the USB glows red.

② Launch Dialog


Start IJCAD.

Then [**IJCAD License Registration**]
Dialog will open.

Click [**USB**] button and [**OK**] button.

IJCAD will start up with license
authorized.

If the USB key is plugged in, the
license registration screen will not be
displayed from the second launch.

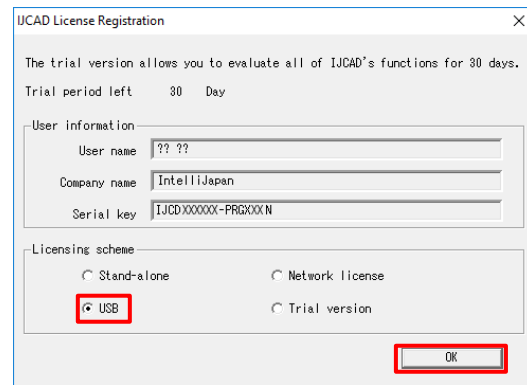

※ In case that the USB key is damaged or lost,
please contact to Intelli Japan.

3-4. Network License version

First, check the [IP address] and [port number] of the server which IJCAD network license manager is already installed.

(Refer to the Network License Manager document for server settings.)


① Launch Dialog

Launch IJCAD.

Then [*IJCAD License Registration*]

Dialog will open.

Select [*Network License*] button and click [*OK*] button.

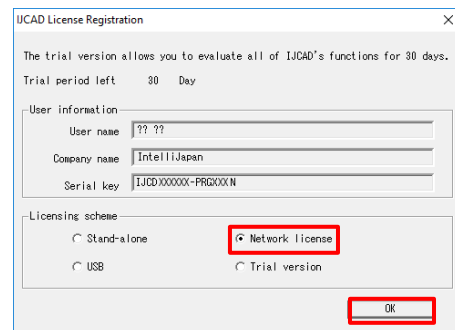


② Server Setup

Input the IP address and port number which is already set up on the server.

Then click [*OK*].

The system will connect to the Network License Manager and execute the License authentication.

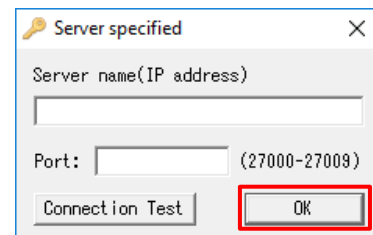

4. Return / Transfer the License

In case of stand-alone version or network version on the server, first you need to return the license in order to transfer the license to the other PC.

Also, when replacing the HDD, changing the configuration of equipment, etc, please be sure to return the license beforehand because the system may lose your license information.

(If you have not returned your license, you will not be able to authenticate again.)

※ **If it is difficult to return the license at the time of transition due to personal computer breakdown or the other reasons, please consult to Intelli Japan.**

Regarding the method to return the license of the network license manager, refer to the setup manual of the network license manager.

4-1. Standalone version (On-line)

You can return the license by online. And it is necessary to connect to internet. If you can not connect to the Internet, refer to "[4-2. Standalone version \(Email Application\)](#)".

① Launch IJCAD License Management

Open the [*IJCAD License Management*] dialog as follows.

For Windows7

Select [*Start*] → [*All Programs*] → [*IJCAD Mechanical 2018*] → [*IJCAD license management*].

For Windows8 · 8.1


Select [*Start*] → [*All Application* IJCAD Mechanical 2018] → [*IJCAD license management*].

For Windows10

Select [*Start*] → [*IJCAD Mechanical 2018*] → [*IJCAD license management*].

② Select Return License

The license information in use of the current machine will be displayed on the dialog. Click [**Return**] button, after selecting the license to return.

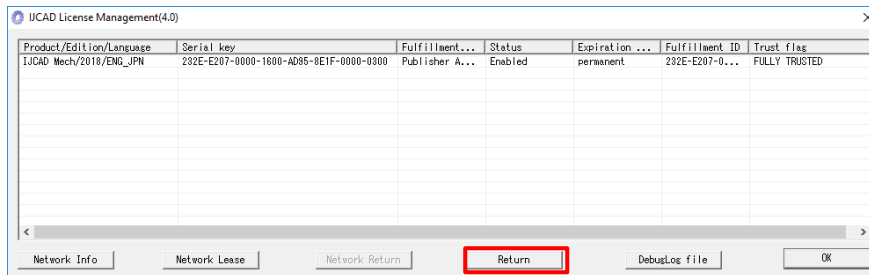

③ Input Applicant Information

[**Return License Information**] Dialog will be displayed.

Enter Applicant Information and Reason for application and click [**Procedure Online**] button.

(If you select "**Other reasons**", please describe the details.)

Return information confirmation

Registrant information

Company name: IntelliJapan

Registrant name: ?? ??

Computer name: DESKTOP-KIUFQCY

Product Information

Serial key: IJCADXXXXX-PRGXXXX

License key: 0000-0000-0000-0000-0000-0000-0000

Applicant information

Contact person: ?? ??

Phone number: 000-000-0000

email address: aaa@intelli.jp

Application reason

Change of a personal computer A user's change

Change to the network version Change to the USB version

Return by the reason of upgrade Online return failed

Other reasons

④ Return Finish

Please check [**Notes**] and select the check box and click [**OK**] button.

Refer to "[3. License Registration](#)", when re-registering the license is necessary.

Activation is successful

License key: [redacted]

Product name: IJCAD 2018 Professional

Language: ENG/JPN

Expiration date: 26-Jan-2019

Points to note

This computer has been authenticated as a terminal to use IJCAD.
You may have the risk to LOSE your license if you carry out any of the following operations:

- Change the authorized computer;
- Reinstall the OS;
- Add or replace hardware (hard disk);
- Format the hard disk;

Please be sure to RETURN the current license before carrying out the above operation(s).
We will issue a new license after you have finished the operation(s).

Please return your current license when changing to a new PC.
The serial number will not be used in a new PC again if the previous license have not been returned.

Confirmed the contents of the notes

4-2. Standalone version (Email Application)

If you can not return the license online, you can get a Return Authorization File from Intelli Japan applying by email.
In case of the email application, it may take 2 ~ 3 business days to get the reply depending on the situation.

① Launch IJCAD License Management

Open the [*IJCAD License Management*] dialog as follows.

For Windows7

Select [*Start*] → [*All Programs*] → [*IJCAD Mechanical 2018*] → [*IJCAD license management*].

For Windows8 · 8.1


Select [*Start*] → [*All Application* IJCAD Mechanical 2018] → [*IJCAD license management*].

For Windows10

Select [*Start*] → [*IJCAD Mechanical 2018*] → [*IJCAD license management*].

② Select Return License

The license information in use of the current machine will be displayed on the dialog. Click [*Return*] button, after selecting the license to return.

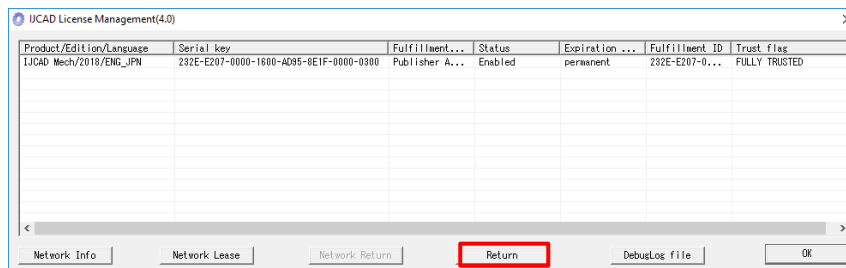

③ Input Applicant Information

[**Return License Information**] Dialog will be displayed.

 
Enter Applicant Information and Reason for Application and click [**Procedure Online**] button.

(If you select "**Other reasons**", please describe the details.)

④ Create Return License File

Click [**Create license information file**].

The return file name "**<license key>-return.xml**" will be automatically created in [**Public documents**] » [**IJCAD 2018**] » [**Return**] folder.



⑤ Email Application

Please click [**Send Mail**] if you want to authenticate with a PC where you can send and receive email. The email screen with necessary information will open.

※ Mailer set in [mailto:] of your computer will launch.

At this time, the license information file is not attached to the mail.


Please attach the license information file created in step ③ and send the mail.

If your PC can not send an email, move the return file by USB memory to the other computer that can send and receive email in order to apply. (It is possible to submit multiple licenses together.)

⑧ Return Finish

Please check [**Notes**], select the check box and click [**OK**].

When re-registering the license, refer to "[3. License Registration](#)".

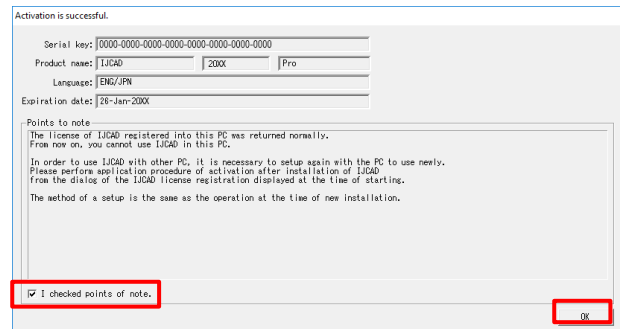

Activation is successful.

Serial key: 0000-0000-0000-0000-0000-0000-0000

Product name: IJCAD | 20XX | Pro

Language: ENG/JPN

Expiration date: 28-Jan-20XX

Points to note

The license of IJCAD registered into this PC was returned normally.
From now on, you cannot use IJCAD in this PC.

In order to use IJCAD with other PC, it is necessary to setup again with the PC to use newly.
Please perform application procedure of activation after installation of IJCAD
from the dialog of the IJCAD license registration displayed at the time of starting.
The method of a setup is the same as the operation at the time of new installation.

I checked points of note.

OK

5. Update Installation

When you want to update version of the installed product, update installation is necessary.

5-1. Before Update Installation

- You do not need to return your license when update installation. After update installation, you can use the current registered license.
- In order to inherit information on CUI and template customization, first save the customization file to a different location.

Cuix file, etc.

⇒C:¥Users¥ (User Name) ¥AppData¥Roaming¥IntelliJapan
¥IJCAD Mechanical ¥R18¥en-US¥Support

Template File

⇒C:¥Users¥ (User Name) ¥AppData¥Local¥IntelliJapan¥IJCAD
Mechanical¥R18¥en-US¥Template

5-2. User Registration

When downloading the latest version, user login is required.

If you have not yet done user registration, register on the WEB page (<https://www.ijcad.jp/>).

If you have already registered, refer to "[5-3. Update Installation procedure](#)".

5-3. Update Installation procedure

① Download the latest Installer


The latest version can be downloaded from the WEB page (<https://www.ijcad.jp/>).

※ User login is required to download.

② Launch the Installer


Decompress the downloaded file, and execute [setup.exe] in the folder as administrator by right click of mouse.

The installer launches.

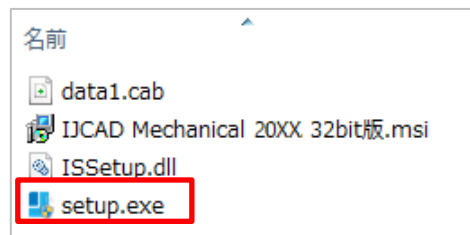

③ Update Installation


After launching the installation, the update confirmation dialog will be displayed. Then click [**Yes**].

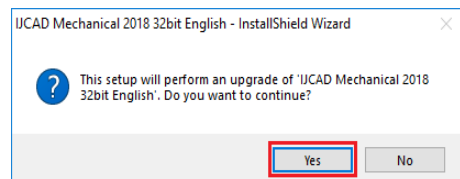

④ Installation

Installation will start.
Please wait.

When the completion message is displayed, click [**Finish**] button.

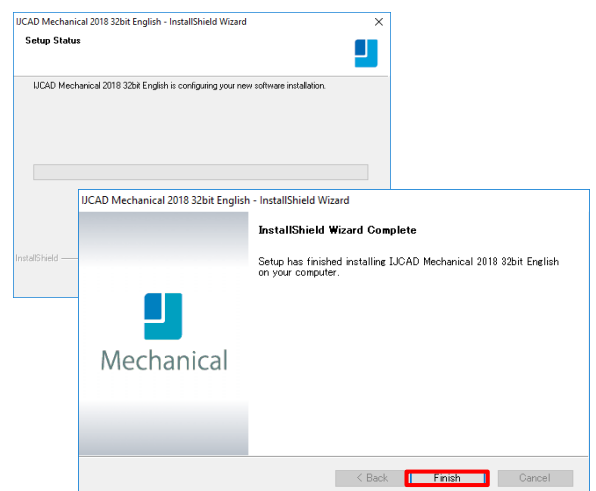

※ In case that the update installation fails, try to perform a new installation after uninstalling the current IJCAD Mechanical.

6. Uninstall the program

If the IJCAD program is damaged for some reason, you need to reinstall it or if you need to delete it from your computer, uninstall the program.

6-1. Before Uninstallation

- In order to inherit information on CUI and template customization, first save the customization file to a different location.

Cuix file, etc.

⇒C:¥Users¥(User Name)¥AppData¥Roaming¥IntelliJapan
¥IJCAD Mechanical¥R18¥en-US¥Support

Move them back to the same folder after re-installation.

Template file

⇒C:¥Users¥ (User Name) ¥AppData¥Local¥IntelliJapan¥IJCAD
Mechanical¥R18¥en-US¥Template

Move them back to the same folder after re-installation.


- If you are replacing the OS or initializing the OS with the standalone version, you need to return the license before uninstalling.
For more details, refer to "[4 . Return License](#)".

Even if uninstallation procedure is performed, the license information remains in the PC when you reinstall with the same OS. Then you do not need to return or re-register the license.

6-2. Uninstallation Procedure

① Screen of Uninstallation

Open the Control Panel and select [Uninstall a program].

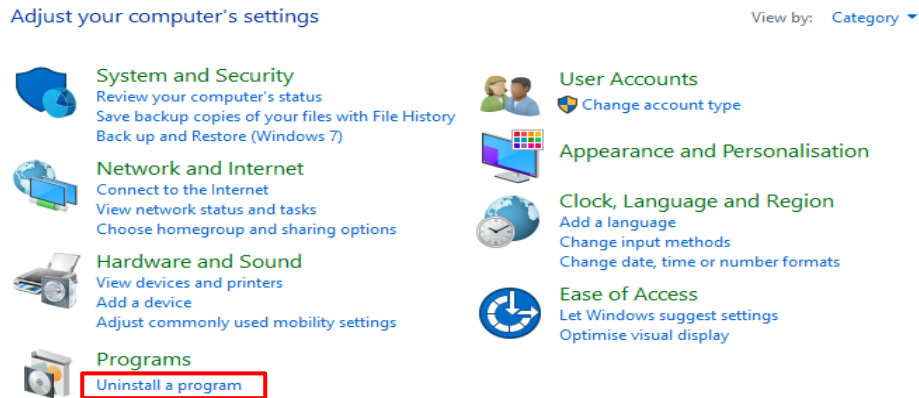


In Windows 8.1 or Windows 10, you can open the control panel from the right click on the start button.

② Uninstallation


Select [IJCAD Mechanical 2018] from the list, at the same time right-click the mouse and click [Uninstall] from the displayed menu.

The installer starts up and a confirmation message is displayed. Click [Yes] button.

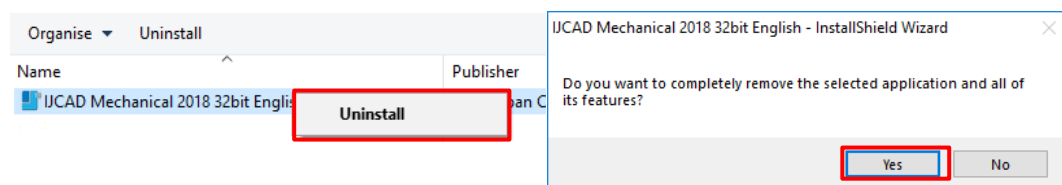

③ Uninstallation Finish

When the completion dialog is displayed, click [Finish] button to finish.

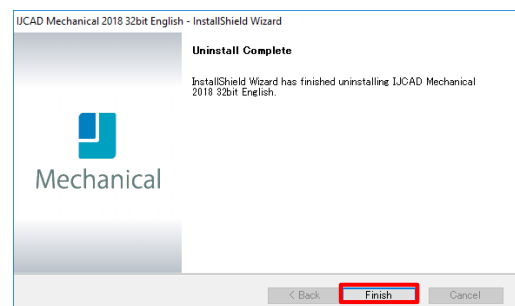

7. Subscription License

The license acquired in the subscription contract can be used not only for this product, but also for the conventional products, such as IJCAD Mechanical 2015, IJCAD Mechanical 2016, and IJCAD Mechanical 2017.

By authenticating this product with a license for subscription, Licenses of conventional products are automatically authenticated.

It is not necessary to activate individually for each conventional version.

Perform setup with the following method for the subscription user of the standalone version.

7-1. Program Installation

① WEB site Access

Access the download page from the URL indicated in the email of the guide sent from Intelli Japan.

② ZIP File Download

The download page of this product's installer opens.

Please click the link for the product, and download the file.


- **Bit number**

Windows 7 / 8.1 / 10 has 32 bit and 64 bit OS.

If your OS is 32 bit OS, choose 32 bit version program, and choose 64 bit version program for 64 bit OS.


③ Decompress File (Unzip)

The downloaded file is a compressed file.
Please be sure to decompress it.

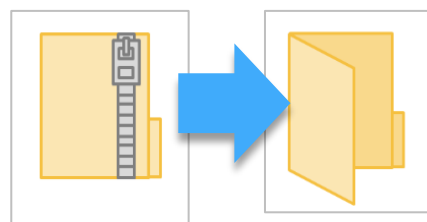

④ Execute [setup.exe]


Open the folder after decompression (Unzip).
Right-click on [setup.exe] in the folder and run it as administrator.

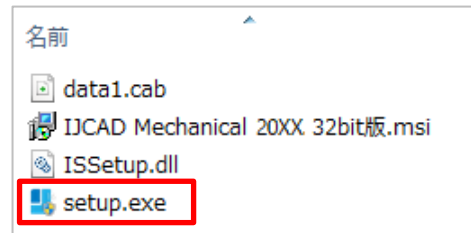

⑤ Launch the Installer


Launch the Installer.

Click [**Next**] button.

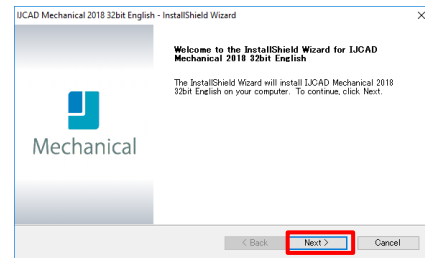

⑥ Confirmation of Software License Agreement


If you agree with the IJCAD software license agreement, check the checkbox of "**I accept the terms of the license agreement**" and click "**Next**".

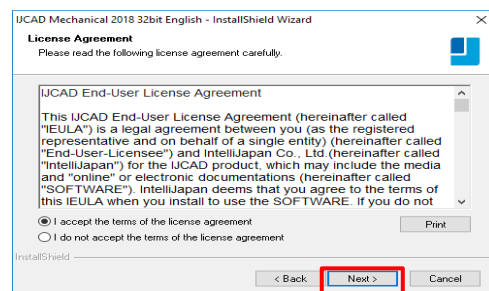

⑦ Input User Information


Please be sure to enter a user name, an official company name and Serial Key, and click [**Next**] button.

For the serial key, please refer to the PDF file of the license information sent by email.

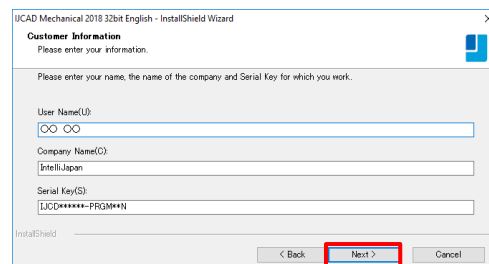

⑧ Select Installation Destination


Select the installation destination folder from [**Browse**].
Otherwise, leave the default settings and click [**Next**] button.

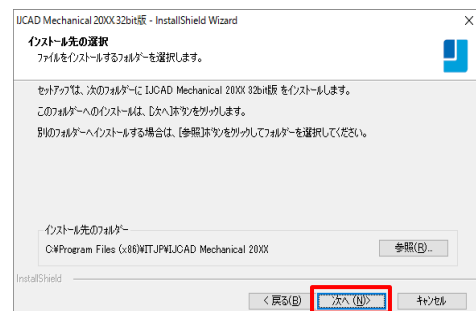

⑨ Select Program Folder

Set the program folder.

Otherwise, leave the default settings and click [**Next**] button.

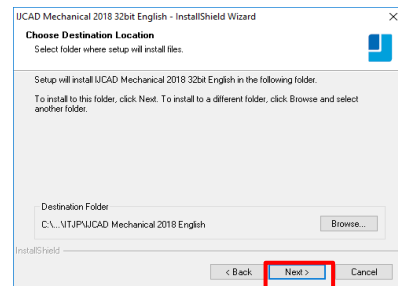


⑩ Installation

Installation will start.

Please wait.

When the completion message is displayed, click [**Finish**].

The icon of [**IJCAD Mechanical 2018**] will be added to the desktop or start menu.

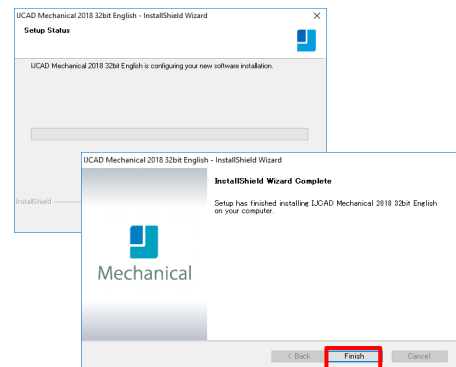

⑪ Launch

※ Be sure to run the program as administrator at the first startup.

Right-click the mouse on the desktop icon and select [Run as Administrator] from the displayed menu to start the program.

7-2. License Registration

First, register the license for the subscription.

Refer to "[3. License Registration](#)", and authenticate the license.

- For online authentication → "[3-1. Standalone version \(Online\)](#) "
- For email application → "[3-2. Standalone version \(Email application\)](#) "

7-3. Return License

When registration of license for subscription is completed, please return old license.

Refer to "[4. Return / Transfer License](#)", and return the license.

If the license to be returned is IJCAD Mechanical 2014, online return is not supported.
Please be careful.

- For online return → "[4-1. Standalone version \(Online\)](#)"
- For email application → "[4-2. Standalone version \(Email application\)](#) "

8. Installation for Version Up / Class Up

Follow the procedure described here to upgrade IJCAD version or upgrade by class.

※ Class up means the change of IJCAD grade, license type change.

(Example) Change from LT version to PRO version, or from standalone version to network version.

8-1. Standalone version

① Return the Old License

Return license of previous version or previous grade.
IJCAD Mechanical 2015 or later products can be returned online.

Refer to "[4-1. Standalone version \(Online\)](#)".

Refer to "[4-2. Standalone version \(Email application\)](#)", if you can not return online.

② Installation of IJCAD

Refer to "[2. New Program Installation](#)".

③ New License Registration

IJCAD Mechanical 2015 or later products can be online authenticated.

Refer to "[3-1. Standalone version \(Online\)](#)".

Refer to "[3-2. Standalone version \(Email application\)](#)" If you can not return online.

8-2. USB Version

You can update the license version of the current USB key in use by the following procedure.

With the updated USB license, it is possible to use not only this product but also the previous version of IJCAD.

(Please use licenses within the range licensed from Intelli Japan)

※ When updating the USB key, note to use the serial key which is not used for the update application.

It is not possible to apply for multiple USB keys using the same serial key.

① Insert USB Key

Please prepare the USB key of your IJCAD.

Insert the USB key into the USB drive of your computer.

※ When the USB is loaded correctly, the part behind the USB glows red.


② Launch IJCAD_UsbUpdater.exe

Launch "IJCAD_UsbUpdater.exe" by the following procedure.

For Windows7

[**Start**] → [**All programs**] → [**IJCAD Mechanical 2018**] →
Select [IJCAD_UsbUpdater.exe]

For Windows8.1

[**Start**] → [**All programs** IJCAD Mechanical 2018] →
select [IJCAD_UsbUpdater.exe]

For Windows10

[**Start**] → [**IJCAD Mechanical 2018**] → Select [IJCAD_UsbUpdater.exe]

③ Confirmation of USB Information

[*IJCAD_UsbUpdater*] dialog opens.

Check if the USB key version or grade is correct, in [*USB Information*] .

※If license information is not displayed, click [*Reload*] and load the USB key information.

The screenshot shows the 'IJCAD UsbUpdater' dialog box. It has two main sections: 'ユーザ情報' (User Information) and '製品情報' (Product Information). Under '製品情報', there is a 'USB情報' (USB Information) section which contains a '再読み込み' (Reload) button highlighted with a red box. Other buttons at the bottom include '更新承認ファイルの申請' (Apply for update approval file), '更新承認ファイル読み込み' (Load update approval file), and 'クラブボードへのコピー' (Copy to club board).

④ Input Requirements

Enter [*User information*] & [*Product information*].

Please enter the serial key described in the body of the email sent from Intelli Japan when delivery to "*New Serial Key*".

We will send an update approval file to the address entered in the email address field, so please enter the email address that you can receive the file.

When all items is filled up, click [*Apply for update approval file*] button.

If you cannot send email from your computer, please proceed to step ⑥.

The screenshot shows the 'IJCAD UsbUpdater' dialog box with the following fields filled: '会社名' (Company Name) is 'インテリジャパン', '登録者名' (Registered Name) is '〇〇 〇〇', '電話番号' (Phone Number) is '000-000-0000', 'メールアドレス' (Email Address) is 'aaa@intelli.jp', and 'コンピュータ名' (Computer Name) is 'A-01'. Under '製品情報', 'シリアルキー-新' (New Serial Key) and 'ID' are both 'IJC*****-PRGM**U'. The 'USB情報' section shows three license entries. The '更新承認ファイルの申請' button is highlighted with a red box.

⑤ Send Application email (Automatic)

The email form will launch.

Do not change the content of the text, and just send it.

Please wait for a reply from Intelli Japan after closing the dialogue, unplugging the USB key after applying.

※It may take 2 ~ 3 business days depending on the situation to issue approval file.

The screenshot shows an email composition window. The '差出人(M)' (From) field is 'aaa@intelli.jp'. The '宛先...' (To) field is 'activation.support@intelli.jp'. The '件名(U)' (Subject) is 'IJCAD UsbUpdater request(インテリジャパン株式会社,00000000)'. The body text of the email is as follows:

```

00000000
会社名:インテリジャパン株式会社
登録者名:〇〇 〇〇
電話番号:000-000-0000
メールアドレス:aaa@intelli.jp
コンピュータ名:A-01
シリアルキー(新):IJC*****-PRGM**U
シリアルキー(旧):IJC*****-PRGM**U
許諾ライセンス一覧
Licence1 = IJCAD 20XX Mechanical English/Japanese
Licence2 = IJCAD 20XX Mechanical English/Japanese
Licence3 = IJCAD 2018 Mechanical English/Japanese
このメールを送信して、更新承認ファイルの申請を行ってください。

```

⑥ Send Application email (Manual)

If you can not send email from the computer that executed [IJCAD_UsbUpdater.exe], click [Copy to clipboard].

Please paste it in a notepad etc. and send it by the following format from the computer that can send email.

- Send to : activation_support@intelli.jp
- Subject : IJCAD UsbUpdater request

⑦ Receive Update Approval File

The update approval file will be delivered from Intelli Japan. (activation_support@intelli.jp)

This update approval file is with a file name of 8 digits, extension [LIV].


⑧ Load Update Approval File

Start [IJCAD_UsbUpdater.exe] with USB key inserted again.


Click [**Refresh Approval File Read**] button.

The [Open] dialog will be launched.

Please select the update approval file received by email and click [**Open**] button.

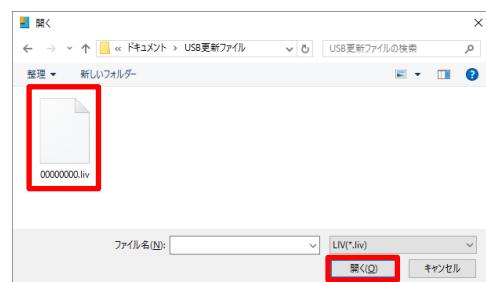


Here, please confirm that the 8 digit number displayed at the top of the [IJCAD_UsbUpdater] dialog has the same name of the file received by email. (If the number is different, you may be confused with a different USB key from application.)

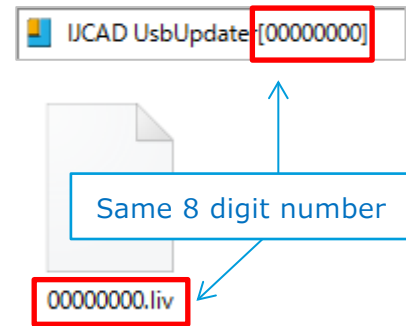

⑨ Update Finish


When the license information is updated, a completion message will be displayed, then click [OK] button.

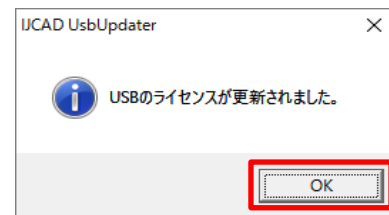

⑩ Reload

In the [IJCAD_UsbUpdater] dialog, click [Reload] button and check that [USB Information] is updated.

If it has been changed as follows, the subscription license update is completed.

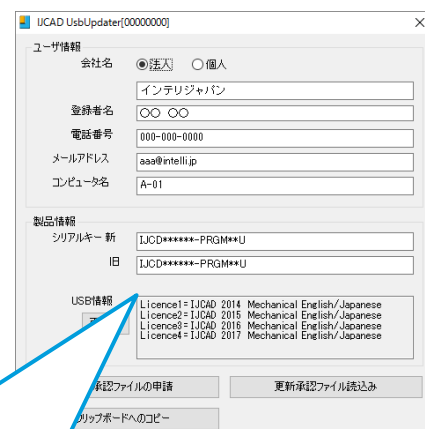

IJCAD Mechanical 2018 ライセンスの場合
 Licence1 = IJCAD 2014 Mechanical English/Japanese
 Licence2 = IJCAD 2015 Mechanical English/Japanese
 Licence3 = IJCAD 2016 Mechanical English/Japanese
 Licence4 = IJCAD 2017 Mechanical English/Japanese
 Licence5 = IJCAD 2018 Mechanical English/Japanese